 
 
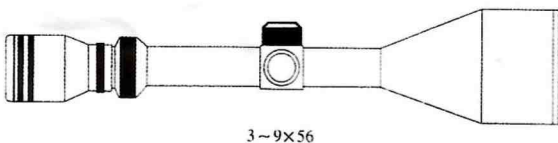 
 
 
 
 
 
 
 


MAINTENANCE

- Keep scope in the place free from acids, alkalis and other corrosives.
- Dust and dirt on the surface of scope should be cleaned with soft cloth or soft tissue with a little alcohol.
- In case of damage. Seek help with the company.

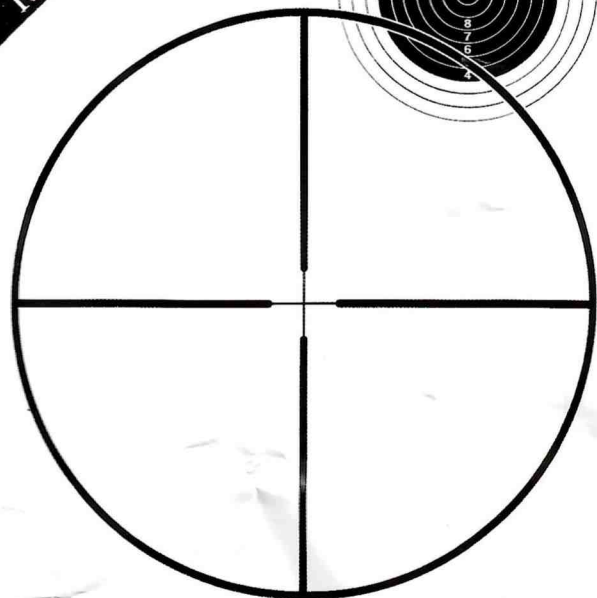

RIFLESCOPE

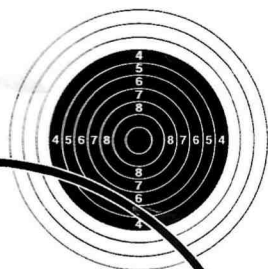

 
RIFLESCOPE

INSTRUCTIONS

BRIEF INTRODUCTION

Riflescopes produced in our factory extensively can be applied to various rifles. It has a crosshair instead of traditional front sight and gap, and this can obviously increase aiming speed, accuracy and percentage of hits.

FEATURES

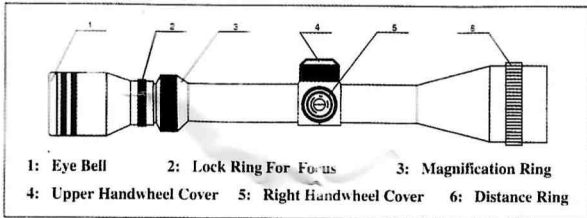

PERFORMANCE PARAMETER TABLE

Model	Actual Magnification	Obj. Lens Aperture (mm)	Field of view (ft.)	Weight (ozs.)	Length (in.)	Eye Relief (in.)	Exit Pupil (mm)	Click value at 100yds (in.)
MA-1	4x	32	29	9	11.8	2.95	8	0.5
MA-2	4x	32	28	9	11.8	3	8	0.25
MA-4	4x	32	29			3.3	8	0.25
MB-1	3x-9x	32	42-13	10	12	3.5-2.6	10.7-3.6	0.25
MB-3	3x-9x	32	39-13	11	11.8	3.5-2.6	10.7-3.6	0.25
MC-1	3x-9x	40	25-14	12	12.2	3.3-2.7	13.3-4.4	0.25
MD-1	4x	15	17	4.5	11	3	2	
MJ-1	2x	20	10	6	8.3	14.6	12.4	
MK-2	4x	40	29			3.7	10	0.25
ML-2	6x	40	20			3.1	6.66	0.25
MN-1	4x-12x	40	27-10	14.5	13	3.4-3	10-3.3	0.25
MO-1	3x-9x	56	35-6.3	18	13.8	3.7-2.6	18.7-6.2	0.25
MP-1	2.5x	20	44			4.1	8	0.25
MQ-1	4x	20	30			3.7	5	0.25

USAGE

Focusing Look through scope within 3 or 4 inch distance from your eye to eyepiece lens. If you can't see the reticle clearly, loosen knurled lock ring and rotate eye bell until the reticle appears clearest. Then screw the lock ring to lock the eye bell firmly.

Mounting Scope is installed on gun by means of mount. Rotate scope tube so that vertical crosshair is vertical and horizontal crosshair is horizontal. Adjust the position of scope on the rifle so that proper eye relief is achieved. Then tighten all screws to fix scope on the rifle firmly.

Boresighting Aim at a target 100 m away and fire at it. If the impact point deviates from the aiming point, measure the vertical and horizontal distance between these two points. Screw off upper and right handwheel covers of the scope and turn two handwheels in the direction showed in the table below. Keep on firing and adjusting until the impact point coincide with the aiming point.

impact point		left up	left down	right up	right down
turn direction	upper handwheel	clockwise	counter-clockwise	clockwise	counter-clockwise
	left handwheel	counter-clockwise	counter-clockwise	clockwise	clockwise

CAUTION: One click on handwheel equals to 1/2 or 1/4 inch displacement on the target 100 m away (see performance parameter table).

Adjusting magnification Magnification of the scope with magnification adjusting system can be varied by rotating power ring.

Adjusting distance Superior riflescope has distance adjusting device. When shooting at a target, rotate distance ring to corresponding position.